


# OPERATING INSTRUCTIONS

## FOR


### H-21/H-23 & H-34/H-35/H-36

1. Take the tensioner in your right hand and depress the tension handle. Place the strap under the gripper so that it touches the bushing with the right hand edge. The end should protrude 2" beyond the tool. Release the tension handle.
2. Insert the upper strap into the slot of the cutter mechanism and the windlass. Hold the tensioner with your left hand and move the tension handle back and forth with your right hand until the package is tightened.
3. When proper tension is reached, place the seal, open side down, over both straps in the front of the tensioner.
4. Open the sealer completely and place it squarely on the top of the seal. Press the sealer handle together to fully crimp the seal. Press the sealer levers together to fully crimp the seal. Remove the sealer, depress the tension handle to cut the strap. With the tensioner handle depress, pivot the tool to the right, and remove from the completed strap.


1.

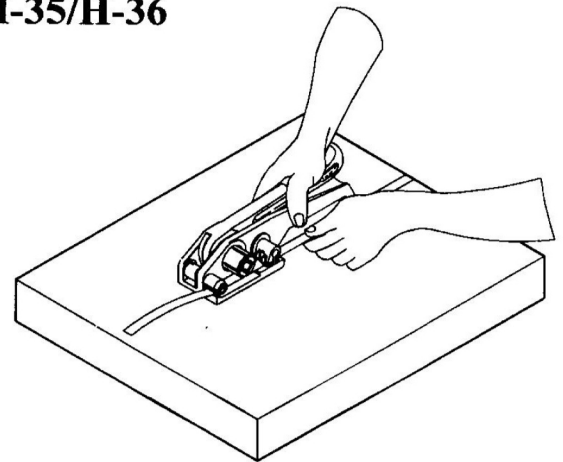

2.

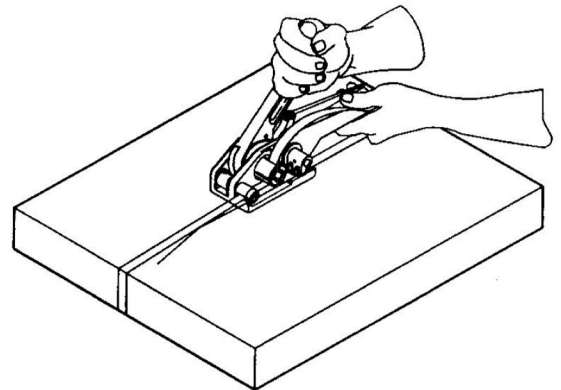

3.

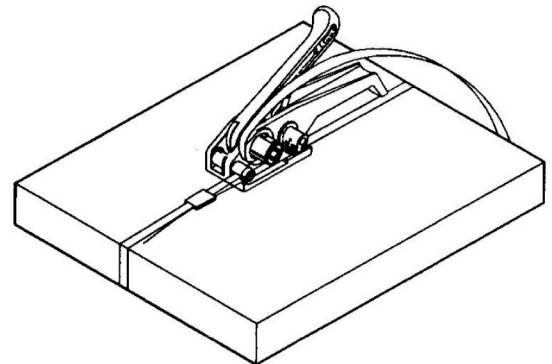

4.

