

How to solve print and cutter issues

1. Remove the tape from the device
2. Hold the top wheel of the device and turn the bottom wheel until the center of the cutter in the top wheel/part aligns to the wide plastic block of the bottom wheel. There should be a sound of a “click” when the wheels are aligned correctly:

Incorrect alignment



Correct alignment

