

 


MICROFIBER


Used for casual wear, sports wear, pants and jackets.

As the colours may vary, depending on screen resolution colour charts are only meant as a guideline.

1028-1000



1028-1060

 

1028-3010



 
1028-3097



1028-5051



1028-5081



1028-5097



1028-7017



1028-7097



1028-8027



1028-9025

