

## Setup and activation of RFID:

### How to setup RFID:

To get into the CCU you will need a computer + mini USB cable.  
If you're using **Windows**, you'll need to download a driver and install first.  
If you're using Mac or iPad you don't need to install a driver.

The driver can be found at [www.chargestorm.se](http://www.chargestorm.se) and the under "**Support**" and "**Manuals**". It is in the section "**Windows driver for CCU config**"

When you're inside the web interface in the CCU, you'll see a menu with different options on the left side. Click at "**Tag Admin**" and in there just write the tag number in the field and press "Add".  
You also decide if the tag will be allowed on the whole station, or just left/right outlet on chargers with 2 outlets.

### How to activate RFID:

In the web interface, click at "**Configuration**" in the left option bar, then click at "**Outlets**".  
Here you need to change the outlet from "**Open**" to "**RFID**", if you want the outlet to be in RFID mode.

When all changes are done, you might need to restart the charger.

Go to "**Firmware**" in the left side bar, and press "Reboot controller".