

c-Go

12V/10A

12V/20A

Power supply and battery charger



Instruction manual

Index

1. Product description	2
2. Safety advices	3
3. Mounting and installation	4
4. Operation	5
5. Problem solving	6
6. Specifications.....	7

1. Product description

De c-Go 12V charger series is designed for full automatic supplying a caravan 12V board system and charging Gel and AGM batteries. The charger contains the latest, state of the art power converter and the charge process is controlled by a microcontroller.

If the safety precautions in this manual are observed and the charger is operated according to this manual, optimal and save charging of the battery is guaranteed.



The charger consists of:

1. A high quality plastic enclosure.
2. A battery cable with a 3 pole connector for connecting to the caravan 12V board system, a battery and the car 12V supply. (Supplied with two cables)
3. A mains cable for connecting to the public grid.
4. Two colored LED's (Light Emitting Diodes) indicating the operation mode.

The charger operates full automatically and needs no adjusting.

Symbols:

	Read the safety advices carefully.
	Read the user manual before using the battery charger.
	For indoor use only
	Do not use the battery charger in a wet environment or in the rain.
	The battery charger and batteries are not to be discarded with normal household waste. Dispose properly according to the local regulations.
	The battery charger is a class II appliance (double insulated)
	The battery charger complies with the European CE requirements.

2. Safety advices

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never use the charger in a wet environment (for example outside), spill fluids over the enclosure or submerge in water.
- Do not use the charger if the cables are damaged, the enclosure is open, or the charger is damaged in such way that internal parts become accessible.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. If the charger is defective, do not try to repair it.
- Make sure the charger is positioned stable.
- Keep a free zone of 10cm around the charger to ensure that heat, generated during operation, can be removed.
- The battery charger is suited for the in Europe standard 220-240V/50Hz mains grid. Operating the charger in places where different mains voltages are applicable will damage the charger or render it unsafe. Please consult Your supplier in case of doubt.
- Charge specified batteries only. Do not recharge non-rechargeable batteries.
- Charge the batteries only if there is proper ventilation. Especially around the batteries. While charging, a small amount of explosive gasses can be generated in the batteries. inadequate ventilation in combination with open fire or sparks can lead to dangerous situations.
- Do **not** connect or disconnect the battery while the battery charger is connected to the mains. E.g. to reduce risk of sparking. Always disconnect the mains, prior to connecting a battery.

- Batteries are capable of providing much energy in a very short time. Prevent short circuits any way. For example walking over the cables or damaging the cables or connector by improper use.
- Do not shorten the length of the charge cable.

3. Mounting and installation

The power supply / battery charger is not suited for outdoor use.

Use the battery charger in a dry, well ventilated place.

Keep at least an area of 10cm around the enclosure for proper battery charger cooling.


During charging, the enclosure can become hand warm. This is normal.

The 20A version is equipped with a build in fan, operating automatically when the internal battery charger temperature increases. For all versions the output power will be reduced in case of insufficient cooling or too high ambient temperatures. When charging, the time required for the total charge process may increase. In power supply mode the maximum output current will be limited. For this reason, do not subject the battery charger to direct sunlight.

Connections:

The battery charger is equipped with a EU plug for connection to the 220-240V/50Hz mains grid. Connect the power supply/battery charger to the mains **after** the battery is connected.

The output cable has 3 connections:

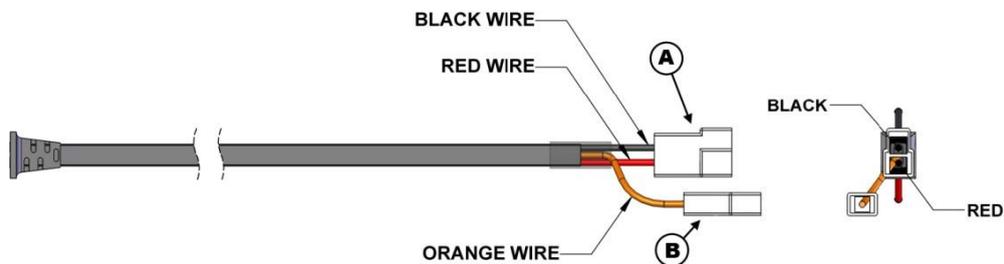

Connect (A) to the battery or caravan board system with one of the two included connection cables. Red is positive (+) and black is minus (-).

For fixed installations the connection cable with the Ring Tongues are recommended.

The crocodile clamp connection cable should only be used if a battery outside the caravan should be charged. (e.g. at home).

Connect (B) to the permanent plus (+) 12V connection of the car.

Now the power supply/battery charger can be connected to the mains.

Important note: Always disconnect the power supply / battery charger from the mains if the battery has to be installed or replaced.

4. Operation

The power supply/battery charger operates automatically. The operation mode can be read from the LED indications. Depending on the installation and the charge level of the battery the following indications can occur:

LED indication overview:

Orange LED 	Green LED 	Mains available ?	Description:
Off	Off	No	No car connected. Power supply / battery charger off or car voltage too low.
Blinking slowly*	Blinking slowly*	No	Caravan battery and 12V board system are supplied from the car.
Off	Blinking slowly*	Yes	Caravan battery is charged. (No car connected)
On	Blinking slowly*	Yes	Caravan battery is charged. (Car is connected)
Off	On	Yes	Caravan battery full. (No car connected)
On	On	Yes	Caravan battery full. (Car connected)
Blinking quickly**	Blinking quickly**	Yes	A problem occurred. See chapter "Problem solving".

* 2 seconds on / 2 seconds off

** ½ second on / ½ second off

User tips:

- Prevent deep discharging of the batteries. The battery life will be reduced significantly. Charge a deep discharged battery as soon as possible.
- Let the battery charger finish the charge cycle completely.
- If the battery is not charged for a longer period, for example during winter, connect the battery charger to the mains once every month to recharge the battery. Battery self-discharge and the quiescent current of the connected users will drain the battery charge slowly.
- Do not charge the batteries below 0°C. Move the battery to a warmer place and start the charge.
- Keep the ventilation openings clean and free of accumulated dust. Blow away the dust and clean the battery charger enclosure eventually with a cloth slightly moistened.

5. Problem solving

In case there is a problem or there is a suspicion the charger is not operating as expected, first check which of the indication LEDs are on. If both the orange and the green LED are blinking quickly (½ second on, ½ second off followed by a 1 second pause), they are indicating an error.

The number of flashes, between the pauses are indicating the error code.

Next, consult the next tables to diagnose the problem.

Table 1: Fault diagnostics

Problem	Possible causes	Solution
None of the LEDs are on.	No mains voltage. Car battery voltage too low.	Check the mains voltage connection. Check the car battery voltage.
	Battery charger or mains cable broken.	Consult Your supplier.
All LEDs are blinking quickly.	Problem detected.	Count the number of flashes between the pauses and consult table 2.

Table 2: Error codes

Error code(s)	Description	Possible causes and solution(s)
1, 2 , 3	Internal battery charger problem.	Restart battery charger. If the error is repeated Consult Your supplier.
4	Temperature too low.	Move to a warmer environment and restart the charging.
5	Temperature too high.	Let the charger cool down for 15 minutes and restart the charging. Prevent direct sunlight. If the problem persists please consult Your supplier.
7	Current too high.	Cabling problem or other problem. Check cabling and connections and restart. If unsuccessful consult Your supplier.
9	Battery reverse polarity.	Disconnect the battery and check the polarity.

If the cause of the failure has been removed, the power supply / battery charger can be restarted by disconnecting it shortly from the mains .

6. Specifications

c-Go specifications / model	10A	20A
Supported batteries	Lead Acid (Gel / AGM) 12V	
Battery capacity range	60-100Ah	90-240Ah
Mains voltage	220-240Vac nominal, (single phase)	
Mains frequency	50/60 Hz	
Output voltage range	12V nominal	
Output current range	0 – 10A	0 – 20A
Maximum output power *	150W	240W
Efficiency	> 90% at full load and 230Vac	
Protections	Polarity **, Output voltage , Temperature	
Dimensions	210 x 175 x 65mm	
Charge status indication	2 LEDs	
Use	Indoor use only	
Operational temperature range *	0 – 40°C	
Storage temperature	-15 - +50°C	
Cooling	Passive	Active (Fan)
Maximum humidity	95% (non condensing)	
Safety class	II	
Regulations	CE (LVD, EMC, RoHS)	
Standards	EN60335-2-29, EN55014-1, EN55014-2	

* At elevated ambient temperatures or if there is no sufficient cooling the output power can be reduced.

** The polarity detection does not detect connecting a reversed polarity battery when the power supply / battery charger already is connected to the mains (operating as a power supply).