


## DIPSWITCH SETTING CBHD3 12/24V 25A

### DIPSWITCH: **SW1**

DP1	DP2	CHARGING CURVE
ON	OFF	IUIa-ACD for Lead-acid (Wet) batteries
OFF	OFF	IUIa-GEL for Gel batteries of Exide-Sonnenschein
OFF	ON	IUU0-AGM FULLRIVER
ON	ON	IUIUa-AGM for Discover AGM batteries (default setting)

Dipswitches are located behind the white label on the top side of the charger and next to the green led you will find 2 sets of dipswitches (SW1 and SW2).

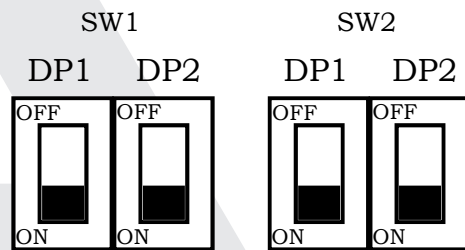

ON

Only the set of dipswitch SW1 (the one on the left side) has effect on charging curve selection accordingly to the table above.

Once you have finished to configure the charger with the desired charging curve according to the battery pack type you have installed in the machine, please cover again the dipswitches with the white label you have previously removed.

### DIPSWITCH: **SW2**

DP1	CHARGING CURRENT
ON	15A
OFF	25A

DP2	BATTERY VOLTAGE
ON	12V
OFF	24V