195

NICRON®

Safe & Reliable Portable Lighting Tools

B74Pro(USB-Cx1)

Max Brightness 700 Lumens

NICRON Lighting Co., Ltd.

Thank you for choosing NICRON flashlight,
please double check the manual before using!

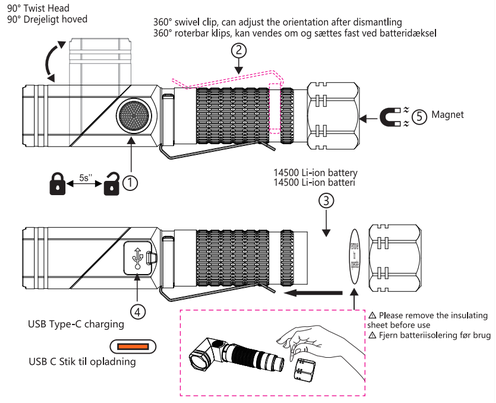

nicronlight Search

★Please "FOLLOW" nicronlight.
Thank you for choosing NICRON products.

FACEBOOK YOUTUBE

www.nicronlight.com 微信公众号（中国）

NICRON LIGHTING CO., LTD

202, Building 25, Vanke Jinyu Binjiang Plaza, 13 DeSheng Middle Road, Dalang, Shunde District, Foshan City, Guangdong Provience, China.
Postcode：528333
Email: info@nicronlight.com
Phone: +86-757-2232 8481

Made in China

EN Operating Map DK Betjening

Regular Mode / Konstant lys

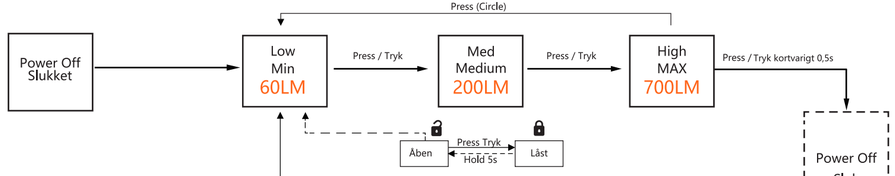

Blink Mode / Blink



224

195

[En] Product Features & Parameter Description

1. Function setting as below table:

	FL1 STANDARD	HIGH	MED	LOW	Strobe	SOS
14500 Li-ion Battery	brightness (LM)	700	200	60	200	200
	run time (hrs)	1	3	6.5	N/A	N/A
	beam distance	167meter				
	max intensity	7000 cd				
	drop testing	1 meter				
	water resistant	IP65，raining resistant				

Above datum tested base on ANSI FL2009 standard with the 14500 Li-ion battery on normal temperature in lab，maybe vary depending on different environment.

2. Bulb：High Power LED
3. Using 1pc safety 14500 Li-ion，rechargeable battery with protect system
4. Voltage range: 3.0~4.2V
5. Standard USB charger: DC 5V 1A
6. Material: Aluminum Alloy
7. Weight: 61g，exclude the battery
8. Size: length 115mm x max diameter 21mm
9. Normal usage temperature：-20° C ~ 50° C
10. Storage temperature range：-20° C ~ 40° C

Operating Instructions

1. Press the switch and hold 0.5second(0.5s), that turn on or turn off the flashlight.
2. Regular function:
Power on-low-med-high(3 modes circle)-power off.
3. Hidden function:
At any mode press the switch 2s, that actives Hidden strobe - SOS.
4. Locked function:
At any mode, long press the switch 5s actives locked that blinks 3 times and power off, it will never work normal. Long press the switch 5s again to unlock and back to Regular function (Low).
Locked function designs for saving energy when put the flashlight into bag for a longtime.
5. Charging:
Insert the battery into the flashlight in the correct way and tighten the barrel end, then open the waterproof plug on the barrel body and insert the USB charging cable, the switch signal light turns red to indicate normal charging, when the indicator light turns green, it is fully charged, and finally unplug the charging cable to cover the waterproof plug to ensure that the product is waterproof and dustproof.

⚠ **Please don't charging dry battery.**

Use and Maintenance

- Please do not open the fixed head parts, otherwise, has risk to damage the light without warranty.
- Only use quality batteries.Remove battery from the light when not in use for longer periods since full decharge can destroy the battery.
- Please often to clean the current contact pin and surface to ensure light up normally, especially when you find out the light flash a little bit by itself.
- Please close the concealed charge and reverse charge module if you don't need when using and store.
- Below is the normal cannot work and flash issues：

Caution 1：battery run out

solution：please use new battery in correct direction.

Caution 2：thread or PCB with dirty thing

solution：clean the PCB or thread by Alcohol Swabs

If still not work, please contact:

+86-757-2232-8481 & info@nicronlight.com

Caution

1. Please do not light up the flashlight face to your eyes directly, it will dangerous to damage your eyes or eye slight.
2. The products only design to use 14500 Li-ion battery.
3. Do not throw the battery into fire or water, please put it in correct polarity when charging.
4. We suggest charging the battery each 3 month at least to protect the battery life if you plan to storage the product for a long time.
5. Please keep the battery far away from children, if eating by mistake, please go hospital at once.
6. Please do not over strength twist the angle head.

Discarded electrical products must not be disposed of together with household waste. Please use recycling facilities. Ask your local authority or retailer for advice on recycling. - The battery must be removed from the device before it is broken up - The device must be disconnected from the mains when the battery is removed - Please dispose of the battery safely.

[DK] Specifikationer

	FL1 STANDARD	MAX	MED	MIN	BLINK	SOS
14500 Li-ion batteri	Lumen	700	200	60	200	200
	Driftstid (timer)	1	3	6.5	N/A	N/A
	Rækkevidde	167 meter				
	Candela	7000 cd				
	Faldtestet	1 meter				
	Tæthed	IP65，støv- og regntæt				

Specifikationer er testet i henholdt til ANSI/NEMA FL 1-2009 standarden med 1 nyt 18650 batteri ved stuetemperatur i et laboratorium, specikationer vil måske variere i andre omgivelser.

2. High Power LED
3. Medfølger 1 stk genopladeligt 14500 Li-ion batteri med sikkerhedskredsløb.
4. Spænding 3,0 - 4,2 V
5. USB oplader (medfølger ikke) 5V 1A
6. Materiale Aluminium legering
7. Vægt 61g, uden batteri.
8. Størrelse 115 mm x max diameter 21 mm
9. Driftstemperatur -20°C ~ 50°C
10. Opbevaringstemperatur: -20°C ~ 40°C.

Betjening

1. Tryk og hold i 0.5s for at tænde eller slukke lygten.
2. Normal sekvens:
Tænd - minimum - medium - max (3 niveauer) - sluk.
3. Skjult funktion:
Blink - SOS Aktiveres uanset tilstand ved at trykke langvarigt i 2s
4. Lås knappen for at spare energi ved længere tids opbevaring og undgå aktivering:
Lås uanset tilstand ved at trykke langvarigt (5s) og lygten blinker 3 gange og slukker og er låst.
Lås op ved at trykke langvarigt (5s) og lygten tænder i Low og er låst op.
5. Opladning:
Isæt batteri i lygten - husk at vende polerne korrekt. Skru batteridækslet på og åben dækslet over ladeporten og tislut USB C kablet.
Ladestatus vises som rødt lys i knappen under opladning og grønt lys når fuldt opladet.
Afmonter ladekabel og luk batteridækslet for at sikre støv- og regntætheden.

⚠ NB Oplad aldrig ikke-genopladige batterier.

Korrekt brug og vedligehold

1. Forsøg ikke at skille lygten ad andet end batteridækslet i bunden for at undgå skade og garantitab.
2. Benyt kun kvalitetsbatterier. Tag batteriet ud af lygten hvis lygten ikke bruges i længere tid, idet batteriet ikke må helt aflades da det derved kan blive ødelagt.
3. Rens jævnligt lygtens og batteriets kontaktflader for at sikre god kontakt og konstant lys. Flimrer lyset så rens kontaktfladerne.
4. Husk at tildække ladestikket med gummidækslet når det ikke bruges.
Fejlfinding:
Intet lys:
- vend batteri eller oplad/isæt nyt batteri
- rens kontaktflader på batteri og lygte med en vatpind med alkohol.

Advarsel

1. Undgå at lyse i øjnene, da det kan give øjenskader.
2. Lygten må kun bruges med 14500 Li-ion batteri.
3. Batteriet må ikke udsættes for ild, væske eller direkte sollys og husk at vende batteriets poler korrekt, når det oplades.
4. Batteriet bør oplades hver 3die måned for at bevare batterileveteiden sårfremt produktet opbevares uden brug i en længere periode.
5. Hold batteriet væk fra børn, hvis det spises af en fejl, så søg læge med det samme.
6. Brug ikke vold til at dreje hovedet.
7. Producenten påtager sig intet ansvar af nogen art for person- eller tingskade, der skyldes brug i strid med instruktionerne.

"Elektrisk og elektronisk udstyr (EEE) indeholder materialer, komponenter og stoffer, der kan være farlige og skadelige for menneskers sundhed og for miljøet, når affaldet af elektrisk og elektronisk udstyr (WEEE) ikke bortskaffes korrekt.

Produkter, der er mærket med nedenstående "overkrydsede skraldespand ", er elektrisk og elektronisk udstyr. Den krydsede skraldespand symboliserer, at affald af elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt.

Til dette formål har alle kommuner etableret indsamlingsordninger, hvor affald af elektrisk og elektronisk udstyr gratis kan afleveres af borgerne på genbrugsstationer eller andre indsamlingssteder eller hentes direkte fra husholdningerne. Nærmere information skal indhentes hos kommunens tekniske forvaltning"

224