

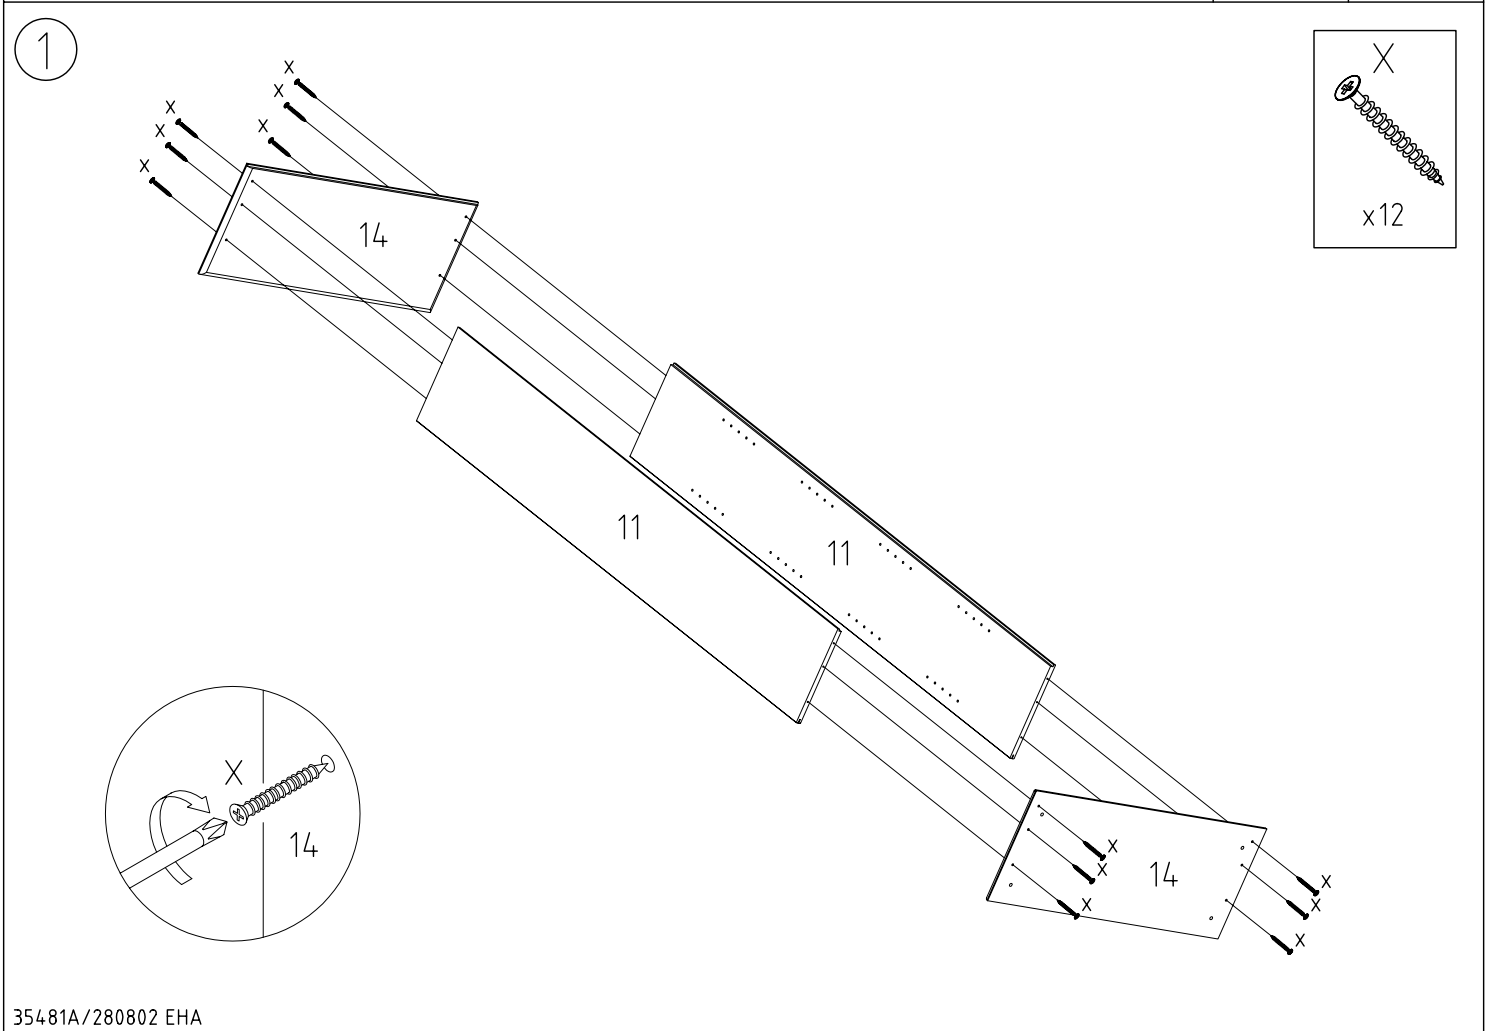
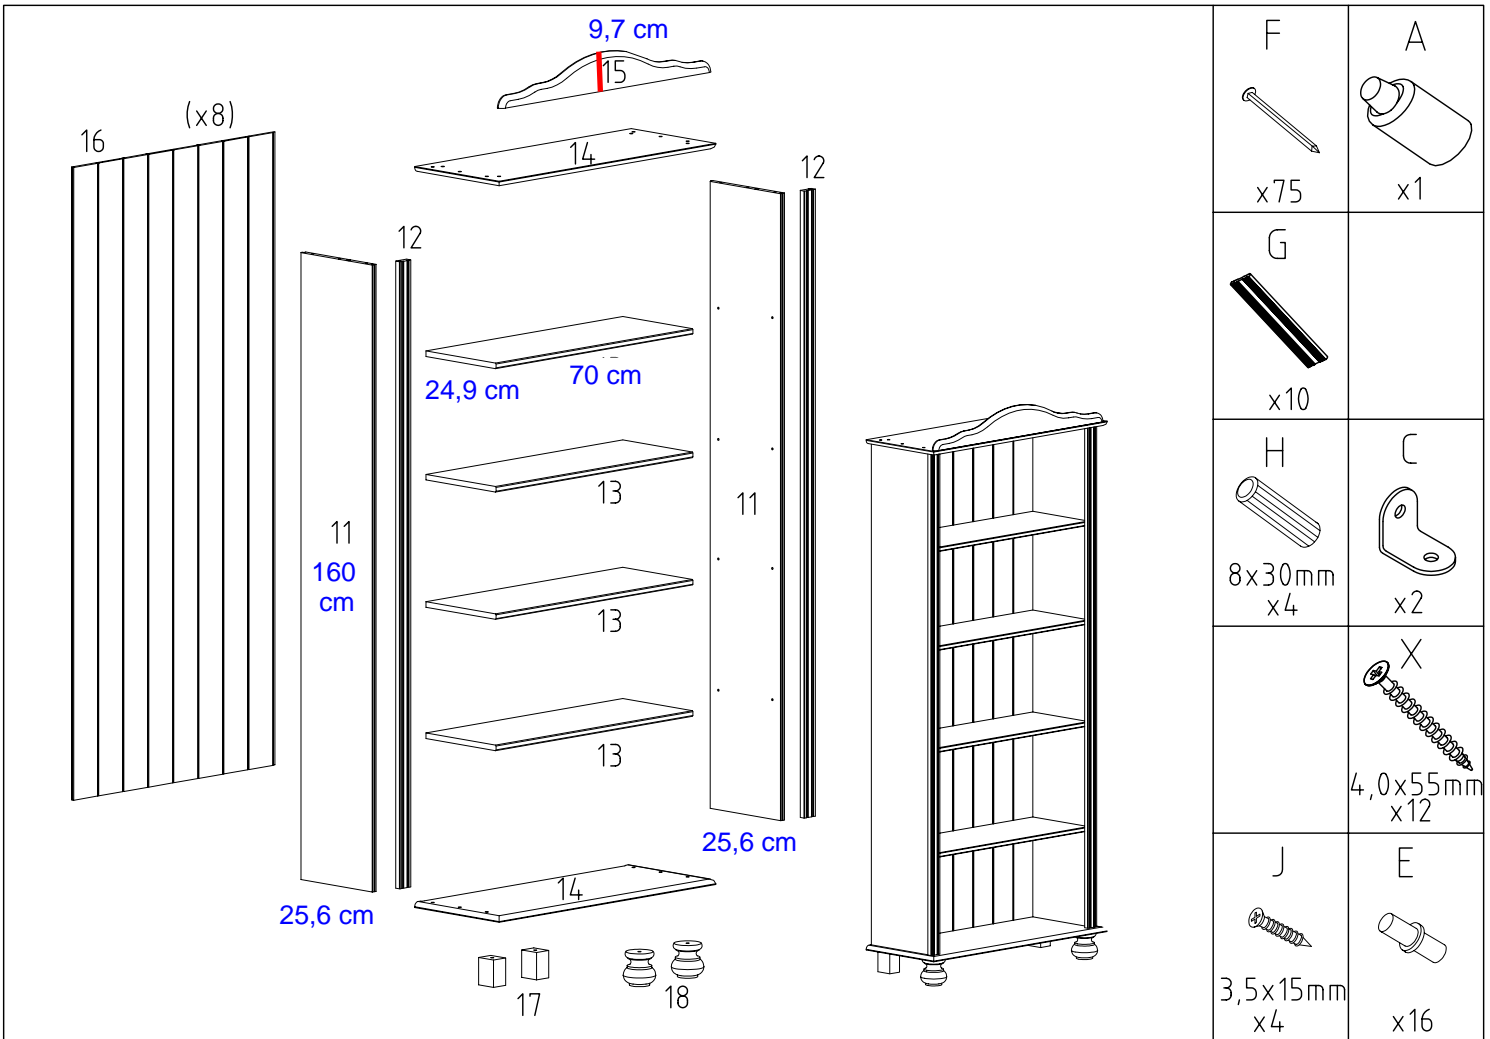

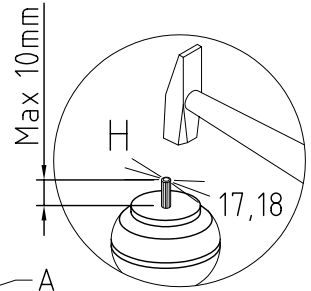
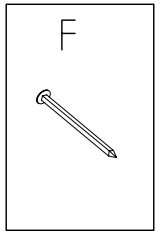
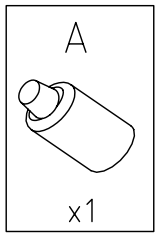
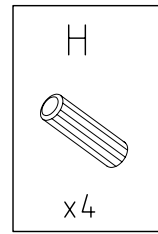
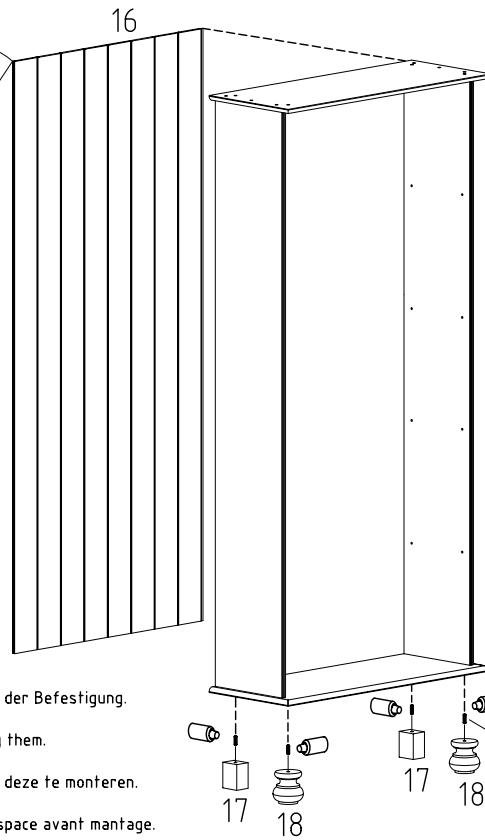
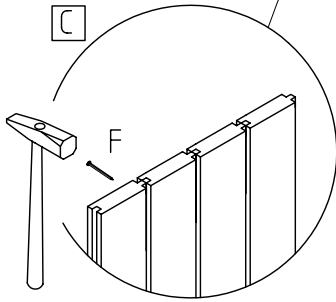


1922L




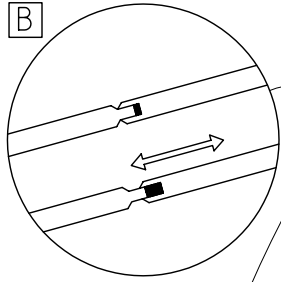


2

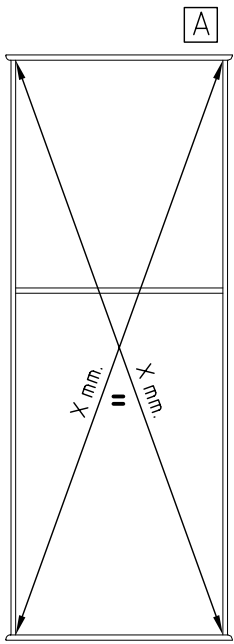

- (DK/N/S) - Kontroller diagonalmål. Fordel bagpaneler før fastgørelse.
- (D) - Kontrollieren die Maße der Diagonale. Bitte die Rückpaneele verteilen vor der Befestigung.
- (UK) - Check the diagonal dimensions. Spread out the backpanels before affixing them.
- (NL) - Controleer diagonaal maat. Achterwandpanelen eerst uitleggen alvorens deze te monteren.
- (F) - Contrôles les mesures diagonal. Les panneaux bien distribuer sur toute lespace avant montage.

3

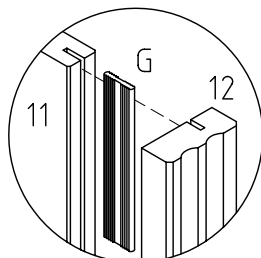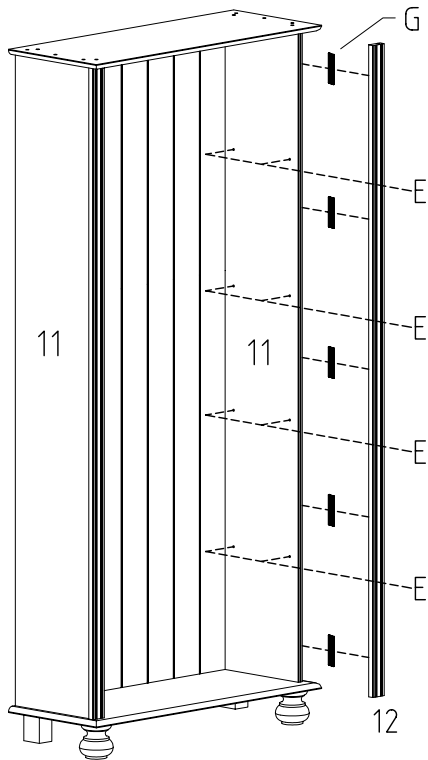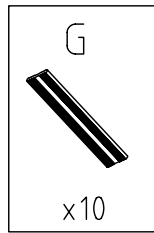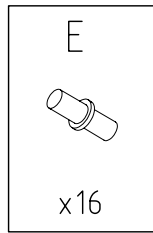

4

