

NICRON®


Safe & Reliable Portable Lighting Tools

- ① Antislip head belt Pandebånd med rutschfester Kopfgurt antiskrid belægning



H35 (18650x1)
Max Brightness 1600 Lumens

NICRON Lighting Co., Ltd.
Thank you for choosing NICRON flashlight,
please double check the manual before using !

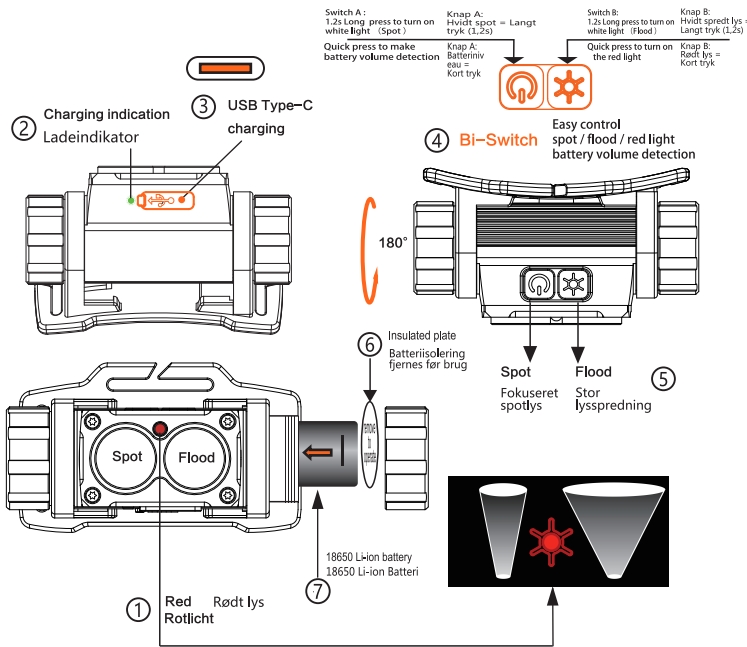

nicronlight

Search

★Please "FOLLOW" nicronlight.
Thank you for choosing NICRON products.



FACEBOOK



YOUTUBE



www.nicronlight.com



微信公众号 (中国)

NICRON LIGHTING CO., LTD

202, Building 25, Yanke Jinyu Binjiang Plaza, 13 DeSheng Middle Road, Daliang, Shunde District, Foshan City, Guangdong Province, China.

Postcode : 528333


Email: info@nicronlight.com

Phone: +86-757-2232 8481



Made in China

EN Operating Map DK Betjening

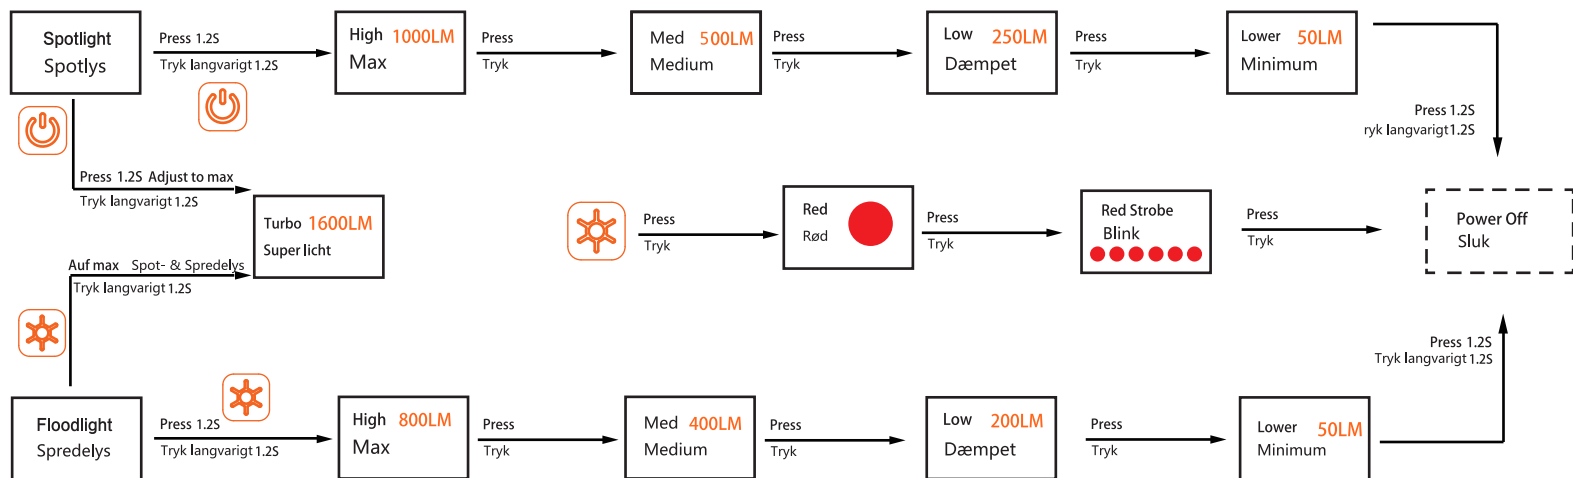

Product Features & Parameter Description

1. Function setting as below table:

FL1 STANDARD	Super bright	High	Middle	Low
Spotlight brightness (LM)	1000	500	250	50
run time (hrs)	2	3	6	30
Floodlight brightness (LM)	800	400	200	50
run time (hrs)	2	3	6	30
beam distance max intensity	120 meter			
max intensity	4000 cd			
max intensity	1 meter 6times			
water resistant	IP65, raining resistant			

The above testing data is obtained by testing in the lab with using the NICRON rechargeable 18650 Li-ion battery 2600mAh. The data may be different due to the use of different brands of rechargeable batteries, or different test instruments, or different test environments.

- Bulb: 2* Samsung white light LED - 50000 hours life time.
- Battery: Use 1pc 18650 Li-ion battery, 2600mAh, 3.6V rechargeable battery.
- Voltage range: 4.2V.
- Standard USB charger: output 5V,1A (Excluded).
- Material: High quality aluminum, with quality anodizing finish.
- Weight: 58.5g, exclude battery;
- Size: 75x41x43 mm;
- Normal usage temperature: -20°C ~ 50°C
- Each smart switch button, easy to adjust total 4 modes, the life time is 10000 times.
- IP65 dust and raining resistant.
- Suitable for industry repair, automotive repair, work lighting, outdoor lighting, etc.

Operating Instructions

- Spotlight function: Press and hold 1.2S the switch A to turn on and turn off, four normal modes: Super Bright - High - Middle - Low;
- Floodlight function: Press and hold 1.2S the switch B to turn on and turn off, four normal modes: Super Bright - High - Middle - Low;
- Red and red strobe modes : Press the switch B of the floodlight to activate red - red strobe- Turn off;
- Simultaneous use as below:
a. Spotlight+Floodlight b. Spotlight+Red light
- Memory function: long press the switch at any mode to turn off, it will be the previous mode if turn on again.
- Long press the switch for 10s, the max mode and the low mode will be reversed.
- Charging: Type-C charging, the button indicator will show red when charging, turns to green when full;
- Battery Volume check: Press switch A lightly, according to the number of white light flashes to know the battery volume:

Battery Volume	>90%	70%-90%	30%-70%	<30%
White Light flashing (times)	4	3	2	1

9. Low battery reminder function

During working, the lamp will blink base on the low battery level.

Discharge low battery reminder: 1) white light will flash 3 times 2 minutes before the light turns off, 2) will flash 3 times again after 30 seconds, 3) will flash 3 times after 30 seconds, and then turns off.

After closing, it can be lit again, and then repeat the above reminding process. When it is lower than 2.9V, it will be turned off directly after lighting.

(flash will happen on the working spot light modes or flood light modes).

Use and Maintenance

○ Please do not open the fixed head parts, otherwise, has risk to damage the light without warranty.

○ Only use quality batteries. Remove battery from the light when not in use for longer periods since full decharge can destroy the battery.

○ Please often to clean the current contact pin and surface to ensure light up normally, especially when you find out the light flash a little bit by itself.

○ Please close the concealed charge and reverse charge module if you don't need when using and store.

○ Below is the normal cannot work and flash issues: Caution 1 : battery run out

solution: please use new battery in correct direction.

Caution 2: thread or PCB with dirty thing

solution: clean the PCB or thread by Alcohol Swabs

If still not work,

please contact +86-757-2232-8481 & info@nicronlight.com

Caution

- Please do not light up the flashlight fact to your eyes directly, it will dangerous to damage your eyes or eye sight.
- The products only design to use 18650 Li-ion battery.
- Do not throw the battery into fire or water, please put it in correct polarity when charging.
- We suggest charging the battery each 3 month at least to protect the battery life if you plan to storage the product for a long time.
- Please keep the battery far away from children, if eating by mistake, please go hospital at once.

Specifikationer

FL1 STANDARD	MAX	MED	Dæmp	Min
Spotlight brightness (LM)	1000	500	250	50
Driftstid (Timer)	2	3	6	30
Floodlight brightness (LM)	800	400	200	50
Driftstid (Timer)	2	3	6	30
Rækkevidde	120 meter			
Candela	4000 cd			
Faldtestet	1 meter 6 gange			
Tæthed	IP65 støv- og regntæt			

Specifikationer er testet i henhold til ANSI/NEMA FL 1-2009 standarden med 1 nyt 18650 batteri ved stuetemperatur i et laboratorium, specifikationer måske variere i andre omgivelser.

- Lyskilde 2x Samsung LED Levetid Hvid 50.000 timer.
- Batteri 1 stk 18650 Li-ion Batteri, 2600mAh, 3.6V genopladeligt batteri.
- Maks spænding 4.2V.
- Oplades (oplader medfølger ikke) med 5V, 1A.
- Materiale Anodiseret kvalitetsaluminium.
- Vægt 58,5g uden batteri.
- Størrelse: 75 x 41 x 43 mm.
- Driftstemperatur -20°C ~ 50°C.
- 2 smartknapper til flere funktioner med levetid på hver 10.000 aktiveringer
- IP65 støv- og regntæt.
- Alsiddig - egnet til vedligehold, arbejdsbelysning, hiking m.m.

Betjening

- Spotlys tryk A langvarigt (1,2s) for at skifte mellem 4 lysstyrker Max-Medium-Dæmpet-Min-Sluk
- Sidelys tryk B langvarigt (1,2s) for at skifte mellem 4 lysstyrker Max-Medium-Dæmpet-Min-Sluk
- Rødt lys og blink Tryk knap B kortvarigt for skifte mellem Rød - rødt blink - sluk.
- Kombinationsmuligheder: Spot og Spredelys samtidig (1600 lm) eller Spot og rødt lys samtidigt
- Hukommelse - sluk med langvarigt tryk og samme lysstyrke bruges ved næste tænding.
- Skift mellem Max-min og Min-max sekvens med langvarigt 10 sekunders tryk.
- Opladning med USB C - knappen vil lyse rødt under opladning og grønt når fuldt opladt.
- Tjek Batteriniveau med let tryk på A og aflæs antal blink jf skema.

Batteriniveau	>90%	70%-90%	30%-70%	<30%
Antal hvide blink	4	3	2	1

- Lavt batteriniveau varsles under brug af det hvide lys
2 minutter før sluk = 3 blink
1m30s før sluk = 3 blink
1 minut før sluk = 3 blink
Lygten kan tændes igen indtil spændingen er under 2,9V hvorefter lygten slukker idet den forsøges tændt.

Korrekt brug og vedligehold

- Forsøg ikke at skille lygten ad andet end batteridækslet i bunden for at undgå skade og garantitab.
- Benyt kun kvalitetsbatterier. Tag batteriet ud af lygten hvis lygten ikke bruges i længere tid, idet batteriet ikke må helt aflades da det derved kan blive delagt.
- Rens jævnlgt lygtens og batteriets kontaktflader for at sikre god kontakt og konstant lys. Flimmer lyset så rens kontaktfladerne med en vatpind med alkohol.
- Husk at tildække ladestikket med gummidækslet når det ikke bruges.
- Fejlfinding:
Intet lys:
- vend batteri eller oplad/isæt nyt batteri
- rens kontaktflader på batteri og lygte med en vatpind med alkohol.

Advarsel

- Undgå at lyse i øjnene, da det kan give øjenskader.
- Lygten må kun bruges med 18650 Li-ion batteri.
- Batteriet må ikke udsættes for ild, væsker eller direkte sollys og husk at vende batteriets poler korrekt, når det oplades.
- Batteriet bør oplades hver 3die måned for at bevare batterilevetiden såfremt produktet opbevares uden brug i en længere periode.
- Hold batteriet væk fra børn, hvis det spises af en fejl, så søg læge med det samme.
- Producenten påtager sig intet ansvar for nogen art for person- eller tingskade, der skyldes brug i strid med instruktionerne.