

Your supplier



**GACELL**<sup>®</sup>

The right battery

GACELL A/S · Sletten 17 · 7500 Holstebro · DK  
+45 961 02 961 · [www.gacell-power.dk](http://www.gacell-power.dk)

# **BATTERY CHARGER TECHNICAL MANUAL**

**MODEL: UY900-HM6010-1**

**VERSION: V1.0**

# Contents

|      |                                      |   |
|------|--------------------------------------|---|
| 1.   | Revised History .....                | 1 |
| 2.   | Warning .....                        | 1 |
| 3.   | Notes.....                           | 1 |
| 4.   | Product Number System.....           | 2 |
| 5.   | Product Weight And Appearance .....  | 2 |
| 6.   | Indicator LEDs.....                  | 3 |
| 7.   | Electronic Characteristics .....     | 3 |
| 8.   | Protect Characteristics .....        | 4 |
| 8.1  | Output Over Voltage Protection.....  | 4 |
| 8.2  | Output Over Current Protection ..... | 4 |
| 8.3  | Short Circuit Protection .....       | 4 |
| 8.4  | Reverse Polarity Protection .....    | 4 |
| 8.5  | Over-Temperature protection.....     | 4 |
| 9.   | Environmental.....                   | 4 |
| 9.1  | Working Conditions.....              | 4 |
| 9.2  | Storage Conditions .....             | 4 |
| 10.  | Reliability.....                     | 5 |
| 11.  | Safety .....                         | 5 |
| 11.1 | Insulation Characteristics .....     | 5 |
| 11.2 | Leakage Current .....                | 5 |
| 11.3 | Standard specifies .....             | 5 |
| 11.4 | Electromagnetic Interference.....    | 5 |
| 11.5 | Electromagnetic Immunity .....       | 5 |

## 1. Revised History

Table 1. Revised History

| Version | Detail              | Date       |
|---------|---------------------|------------|
| V1.0    | The initial version | 03/25/2014 |
|         |                     |            |
|         |                     |            |
|         |                     |            |
|         |                     |            |

## 2. Warning

**Please use the charger in accordance with the parameters and connections in the manual, and do not disassemble it. Or we will not be liable for the resulting loss.**

## 3. Notes

(1) High voltage inside the case, may cause harm to the human body. If the charger fails, please contact us. Users and non-professional maintenance staff is forbidden to open the charger.

(2) Charger should not be used where in damp, water, direct sunlight or near heat sources.


(3) Charger should be used where clean and well ventilated. Don't sheltered inlet or outlet during charging, and make sure that both inlet and outlet have air space of at least 10cm.

(4) Charger should be used to prevent children closer and touch.

(5) Is prohibited that the charger used or stored near flammable, explosive goods.

(6) While cleaning the charger please do not wash with water, we recommend using a clean rag dipped a small amount of alcohol.

## 4. Product Number System

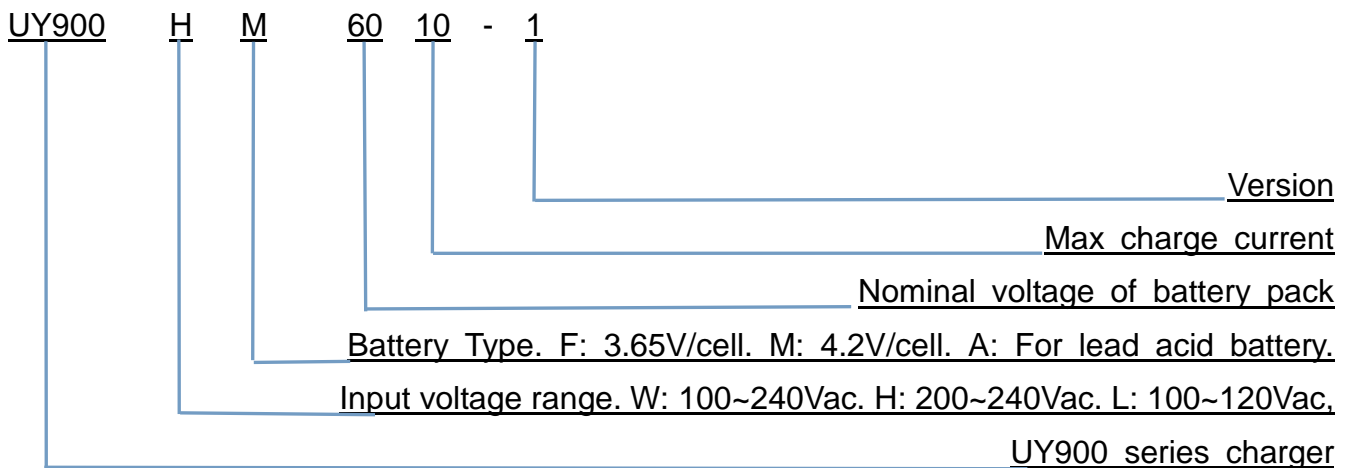

## 5. Product Weight And Appearance

UY900 series charger is about 3kg without input AC wire. Charger appearance as figure 1 below.



## 6. Indicator LEDs

Green: Charge complete, standby


Red: Charging

## 7. Electronic Characteristics

Table 3. Electronic characteristics

| No. | Item                                      | Unit | Min. | Typ. | Max.                       | Remark    |
|-----|---|------|------|------|----------------------------|-----------|
| 01  | Input voltage                             | Vac  | 200  | 220  | 260                        |           |
| 02  | Input power                               | W    | -    | -    | 888.3                      |           |
| 03  | Constant charge voltage                   | Vdc  | 72.7 | 73.0 | 73.3                       |           |
| 04  | Float voltage(for lead acid battery only) | Vdc  | -    | -    | -                          |           |
| 05  | Constant charge current                   | A    | 9.7  | 10   | 10.3                       |           |
| 06  | Charge complete current                   | A    | 0.65 | 0.8  | 0.95                       |           |
| 07  | Ripple voltage                            | -    | -    | -    | Constant charge voltage*1% |           |
| 08  | Efficiency                                | %    | 85   | -    | -                          | Full load |

### Charge Curve

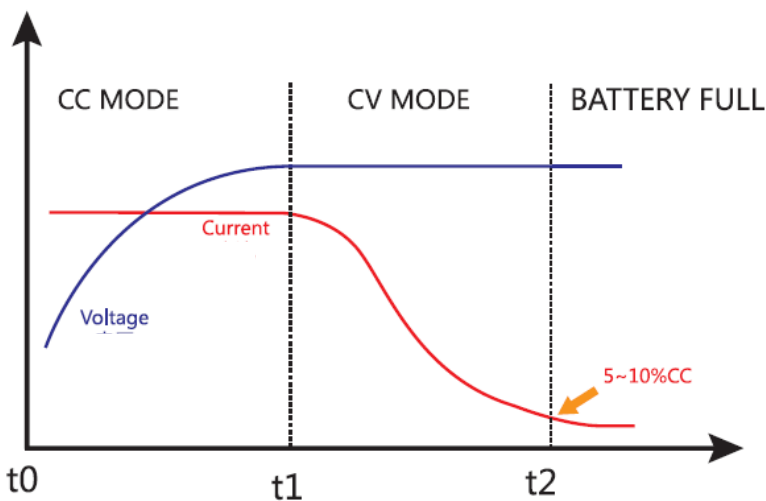

## **8. Protect Characteristics**

### **8.1 Output Over Voltage Protection**

When the charger output voltage exceeds the maximum charging voltage, the charger enters the standby state protection. Troubleshooting can be automatically restored to normal working condition.

### **8.2 Output Over Current Protection**

When the charger output current exceeds the maximum charging current, the charger enters the over current protection status. Troubleshooting automatically restored to normal working condition.

### **8.3 Short Circuit Protection**

When the charger has short circuit at output, the charger enters short-circuit protection status. Troubleshooting automatically return to normal working condition.

### **8.4 Reverse Polarity Protection**

When the charger output positive negative pole and battery pack are connected in reverse, the internal relay of the charger is not sucked and there is no voltage current at the output terminal of the charger. After the correct connection, the charger can be charged normally.

### **8.5 Over-Temperature protection**

When charger internal temperature exceed 75°C, it will be into the over-temperature protection state and the cuts off output. When the temperature returns to 65°C, the charge is restored again.

## **9. Environmental**

### **9.1 Working Conditions**

Ambient temperature: -5°C ~ +40°C;

RH: 5% ~ 95%;

Max. altitude: 2000 meter;

Cooling: UY series chargers use of forced air cooling system. Under dustless and ventilated conditions, the full load temperature rise not exceeding 40°C.

### **9.2 Storage Conditions**

Ambient temperature: -40°C ~ +70°C;

RH: 0% ~ 95%;

Max. altitude: 20000 meter.

## 10. Reliability

Table 4. Reliability

| No. | Item           | Description                           | Remark |
|-----|----------------|---------------------------------------|--------|
| 01  | MTBF           | average operating life $\geq 30000$ h | 25°C   |
| 02  | Anti-vibration | 5mm/50Hz/600s vibration test          | PASS   |

## 11. Safety

### 11.1 Insulation Characteristics

Table 5. Insulation characteristics

|                      |                 |   |
|----------------------|-----------------|---|
| Insulation resistant | Input to output | DC500V 50M $\Omega$ min (25°C, Humidity $\leq$ 70%) |
|                      | Input to case   | DC500V 50M $\Omega$ min (25°C, Humidity $\leq$ 70%) |
|                      | Output to case  | DC500V 50M $\Omega$ min (25°C, Humidity $\leq$ 70%) |
| Hi-Pot               | Input to output | 1500Vac 50Hz 1minute $\leq$ 10mA                    |
|                      | Input to case   | 1500Vac 50Hz 1minute $\leq$ 10mA                    |
|                      | Output to case  | 500Vac 50Hz 1minute $\leq$ 10mA                     |

### 11.2 Leakage Current

With max input and full load, the leakage current  $< 0.75$  m A, meet to Class II.

### 11.3 Standard specifies

EN 55022:2006+A1:2007

EN 61000-3-2:2006+A1:2009+A2::2009

EN 61000-3-3:2008

EN 55024:1998+A1:2001+A2:2003

### 11.4 Electromagnetic Interference

Conducted interference: EN55011.13.14-1.15.22.FCC part 15&18.VCCI;

Radiated interference: EN55011.13.22.FCCpart 15&18.VCCI/EN55013.EN55014-1.

### 11.5 Electromagnetic Immunity

Anti-static: IEC/EN61000-4-2 8KV;

Pulse group: IEC/EN61000-4-4 2KV;

Lightning surge: IEC/EN61000-4-5 1.5KV;

Harmonic: IEC/EN61000-3-2  $< 25\%$ .