

Installation instructions for the Yepp® Easyfit carrier

Installation instructions for the Yepp® Easyfit carrier


The Yepp Easyfit carrier is suitable for fitting to standard bicycle luggage carriers with a load capacity of at least 60 lbs. The Yepp Easyfit carrier has a special installation frame for the Yepp Easyfit and the Yepp Junior rear seat as well as to the GMG Classic 911 model child seats. The maximum width of the carrier is 6.75 inches.

Installing the Yepp Easyfit carrier

Position the Yepp Easyfit carrier on the luggage carrier and insert the 4 bolts from above into the four large slots. See the picture below for the proper positioning (**pic.1**).

Insert the bolts into the 4 clamps positioned under the Yepp Easyfit carrier. Note the proper position of the clamps (**pic.2**).

Position the Yepp Easyfit carrier exactly on your luggage carrier and tighten the bolts firmly.

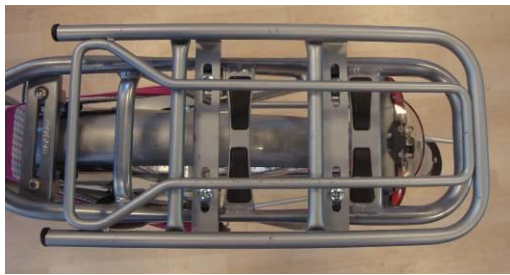

Pic. 1



Pic 2.

Warnings and Safety advices:

WARNING: Check the bolts frequently and tighten them again if necessary.

- The Yepp Maxi Easyfit can be quickly and simply fitted after the installation.
- The position of the child seat depends on the type and size of the cycle.

WARNING: The centre of gravity of the Yepp Maxi Easyfit model child seat must never be further than 10 cm / 3.75 inches behind the rear axle (see the user instructions for the Yepp Maxi Easyfit).

WARNING The Yepp Easyfit carrier can only be installed on luggage carriers with a load capacity of at least 60 lbs.

If the Yepp Easyfit carrier is used with the Classic junior 911 model child cycle seat, the luggage carrier must have a load capacity of 78 lbs.

- If you are installing a Yepp Maxi Easyfit model child seat, please check whether the bicycle could tip over backwards when the child is in the seat. If so, move the Yepp Easyfit carrier forwards.
- Check frequently to ensure that all fittings are sufficiently tight.
- Use the Yepp Easyfit carrier only on a bicycle that is in good working order, of a type suitable for carrying the additional load, and of proper size and adjustment for the rider.
- Check the owner's manual that accompanied the bicycle or contact the bicycle manufacturer or distributor to obtain this information.
- The Yepp Easyfit carrier must not be used on motorised vehicles (including mopeds, scooters, etc.) apart from E-bikes.
- Never modify the carrier in any way.
- Do not use the carrier if any part of it appears damaged.

RECOMMENDATION:

- Use a good two-legged bicycle stand.

Guarantee:

GMG guarantees that this product has been manufactured according to the latest European safety standards and quality requirements for this product and that this product at the time of purchasing has no defect in workmanship and material. During production various quality checks have been performed. In case, despite all our efforts, during our guarantee period of 24 months, this product shows a material and/or manufacturing fault (with normal use as described in this manual), than GMG is required to respect this guarantee. In that case please contact your dealer. For detailed information on the application of the guarantee you can contact your dealer.

The guarantee is excluded in the following cases:

- In case of use different than described in the manual
- The product is brought for repair through a not authorized dealer
- The product is not presented with the original proof of purchase to the manufacturer.
- Repairs were performed by third party or not authorized retailer
- The defect was caused by misuse, careless use or maintenance, by neglect or impact damage to the seat and/or frame
- In case of normal wear to parts, which you may expect during daily use of a product.

Since when?

The guarantee term starts at the date of purchasing of the product.

For what period?

The guarantee is for a period of 24 consecutive months. The guarantee is only for the first owner and cannot be transferred.

What You Should Do

After purchasing the product you must carefully keep the proof of purchase. The date of purchasing must be clearly visible on the proof of purchase. In case of any problems or defects you have to go to the retailer. You cannot demand exchange or return. Repairs will not affect the duration of the guarantee. Products sent directly to the manufacturer are **not** eligible for guarantee.

This warrantee is according to the European Standard 99/44/EG dated May 25th 1999.

Guarantee specifications:

	< 6 months after purchase	> 6 months after purchase
Corrosion	✓	?
✓ = Guarantee		? = Guarantee possible after inspection

Rights of modifications reserved

GMG bv – Tingietersweg 125 – 2031 ER Haarlem – The Netherlands – www.yepp.nl